



User manual
for the
COMFORT tent

t +386 (0)1 721 94 78
w acovia-design.com
e info@acovia-design.com

📍 A.D. Acovia Design d.o.o.
Šaranovičeva 36b
1230 Vir pri Domžalah
Slovenija – EU

thank you **for your trust**

Your new scout tent is made with modern techniques and materials. It also offers a wealth of accessories that you'll definitely want to take advantage of. Please read and follow the information in this manual carefully before using it for the first time. This will give you a quick and comprehensive introduction to your tent and help you learn how to make sure it lasts for many years to come. The instructions also include a list of components and spare parts, a declaration of conformity, a manufacturer's warranty statement and a statement on the elimination of hidden defects.

Warning!

Warranty can only be invoked with regular maintenance by the manufacturer.

If you have additional questions, please contact us. Questions and suggestions are always welcome.

We wish you an efficient use of your new tent,
yours, A.D. Acovia Design

COPYRIGHTS

We reserve the right to make changes. In A.D. Acovia Design d.o.o. we are constantly improving all types and models of our products. Therefore, please accept with understanding any changes in design, equipment and technique upon delivery. The tents in many photos can also be equipped with accessories available at an additional cost. Claims based on the data, images and descriptions in these operating instructions are therefore not justified. For more detailed information on the entire offer, contact us. Reprint, reproduction or translation, in whole or in part, without the written consent of A.D. Acovia Design d.o.o. not allowed. All rights under the Copyright and Related Rights Act (ZASP) are expressly reserved to A.D. Acovia Design d.o.o. We reserve the right to make changes.


Made in Slovenia.

©2025 A.D. Acovia Design d.o.o.

tent use

Traditional scout canvas tent **COMFORT** is distinguished by a modern design. The canvas is made of TenCate cotton fabric with excellent properties of ventilation and humidity regulation. It ensures a pleasant climate in the tent and is resistant to all weather conditions. **The frame is shifted along the sides, resulting in a larger and more useful floor plan.** It offers plenty of storage space. **The canopy extends the usable floor plan** by 137 cm in length (3.29 m²), which also protects against weather (sun, rain, etc.) and further helps to cool the interior.

PICTURE 1 – DIMENSIONS

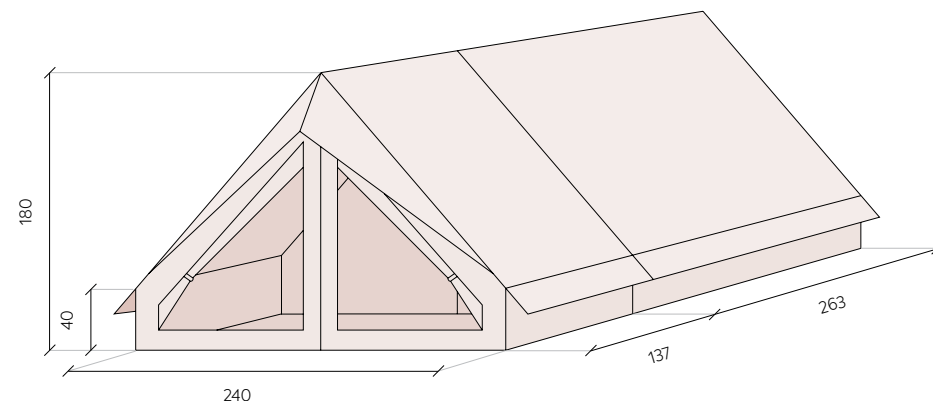

tent COMFORT inspection

PICTURE 1 – DIMENSIONS (+ APSE)

width: 240 cm
length: 263 (+ 137) cm
ridge height: 180 cm
side height: 40 cm
living area: 6.6 + 3.3 m²

PICTURE 2 – FRAMES

ø 22 × 1 mm
 galvanised and passivated steel
 "POWER GRIP" clamping system
telescopic standing pole: 1 pcs, 180 cm
3-piece telescopic A-frames: 2 pcs, 183 cm
3-piece telescopic ridge pole: 1 pcs, 400 cm

CANVAS

1 pcs, 100% TenCate cotton

BOTTOM

durable PE fabric

CLOSING SYSTEM

YKK zippers, a key with two pendants


ACCESSORIES

steel pegs: 23 pcs
synth. ropes with aluminium tensioners:
 12 pcs, 150 cm; 2 pcs, 300 cm
rubber covers: 3 pcs

BAGS (PACKAGING)

canvas + accessories:
 1 pcs, ø 40 × 80 cm (0.1 m³)
frames: 1 pcs, 20 × 120 cm (0.037 m³)


PICTURE 2 – FRAMES

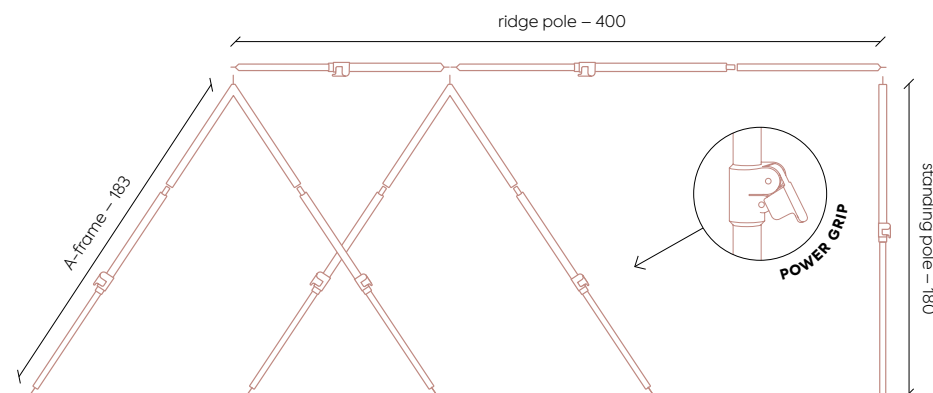

3 setting up the tent

The tent is set up **as a whole**. Choose a suitably large terrain and clean it of stones and other upholstery. **Follow these steps:**

1. Unfold the tent and tie the ropes (150 cm) to the fixing clamps along the edge of the roof ("flaps").
2. Tighten the bottom of the sleeping part and attach it with pegs.
3. Assemble the individual parts of the frame and enter the sleeping area of the tent.
4. Place the A-frames outside the sleeping area – in the lobby. Position the ridge pole onto the standing pole and rear A-frame (standing in the lobby). The ridge pole should be passing from the sleeping area to the lobby through an opening above the tent entrance.
5. Attach the front part of the ridge pole – which forms a lobby ridge – onto the rear and front A-frame.
6. **Be careful!** Adjust the rubber covers on the tips of the standing pole and both A-frames so that the wider parts of the covers are looking up. Only then you can push the tip through a suitable hole on the canvas.
7. Stretch the ridge pole with the help of a "power grip" attachment so as to achieve the best tension of the tent ridge.
8. Stretch the standing pole with the "power grip" attachment to its final height.
9. Raise the height of the A-frames with the help of the "power-grip" attachments by adjusting both sides so that the tent ridge runs evenly along the entire length of the roof (sleeping area + lobby).
10. By tightening the outer ropes, you'll achieve the correct tension of the tent roof, as well as a nice appearance of the tent.
11. Tie the long ropes (300 cm) onto the front and rear tips of the ridge. Thread the ropes through the PVC triangles on both "ponytails", making sure that both of them are taut.

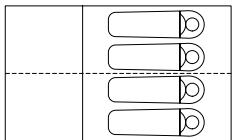

4 dismantling the tent

Disassemble the tent in the reverse order of installation. Remove all the pegs and store them into the accessory bag.

tent packing, storage

Pack exclusively completely dry canvas parts. If this is not possible, dry them as soon as you arrive at the storage place. Remove the components from the packaging, unfold them and let them dry completely.

tent maintenance, cleaning

Brush the canvas parts and, if necessary, wash them with a jet of water. Use only a softer brush. Spread out the tent and let it dry. Washed the frame and let it dry. **Canvas parts, frame parts, and accessories should be packed and stored completely dry. Machine washing, dry-cleaning, or bleaching of canvas parts is not allowed. Ironing or tumble drying them is also not allowed.**

Tears and other damage to the outer canvas should be repaired by the manufacturer.

use of insect repellents

The canvas of the tent is factory impregnated, which prevents water from passing through the canvas. Spraying insect repellent over the surface of the canvas will damage the impregnation, causing possible water seepage in the area where the agent was applied. Subsequent impregnation of the canvas with impregnating agents will not be deep. Consequently, the impregnation is not permanent. It will be necessary to replace the canvas or to sew a new one.

We suggest applying insect repellents to yourself outside the tent to prevent damaging the canvas.

∞ spare parts

CANVAS PARTS

canvas: 100% TenCate cotton

inner isolation roof:

100% cotton (summer)

inner isolation unit:

100% aluminised fabric (winter)

FRAMES

ø 22 × 1 mm

galvanised and passivated steel

"POWER GRIP" clamping system

telescopic standing pole: 180 cm

3-piece telescopic A-frame: 183 cm

3-piece telescopic ridge pole: 400 cm

BAGS (PACKAGING)

canvas + accessories: ø 40 × 80 cm (0.1 m³)

frames: 20 × 120 cm (0.037 m³)

ACCESSORIES

steel peg

synthetic ropes with aluminium tensioners:

150 cm, 300 cm

rubber cover

USER MANUAL

english

slovenian

∞ additional equipment

tent underlay

hanging organizer

tent mat

field bed

tent inspection, service

Perform the inspection and service within the prescribed time limits, which are listed below.

PERFORMED BY THE USER

Pre-use inspection – every time you take the tent out of the storage area for re-use.

Regular inspection and service – after each use and before storing the tent. Clean the bottom (mounting surface) and check all packaging. The inspection should take place as described below:

- Assemble the tent according to the installation instructions.
- Inspect the frame parts and their wear. Use a "spare parts and accessories" catalogue for service purposes.
- Inspect the set-up tent from the outside and inside and mark the damage with chalk.
- Inspect the tent karner (PVC protection at the tent floor) and the ropes for anchoring the canvas parts.

PERFORMED BY THE MANUFACTURER/AUTHORIZED SERVICER

General servicing – whenever damage to tent parts occurs they can only be serviced by the manufacturer/authorized servicer, with original spare parts.

tent warranty statement

The COMFORT tent is guaranteed for 60 months, provided that all instructions for use are followed. The lifetime of the tent is at least 10 years if all instructions for use are followed. The manufacturer undertakes to supply spare parts and other components for at least 5 years and to guarantee the servicing of the tent.

Date: _____

Producer: A.D. Acovia Design d.o.o.





+386 (0)1 721 94 78



acovia-design.com



info@acovia-design.com

A.D. Acovia Design d.o.o.

Šaranovičeva 36b

1230 Vir pri Domžalah

Slovenia – EU

