



User manual
for the
FREEDOM tent

t +386 (0)1 721 94 78
w acovia-design.com
e info@acovia-design.com

📍 A.D. Acovia Design d.o.o.
Šaranovičeva 36b
1230 Vir pri Domžalah
Slovenija – EU

thank you **for your trust**

Your new scout tent is made with modern techniques and materials. It also offers a wealth of accessories that you'll definitely want to take advantage of. Please read and follow the information in this manual carefully before using it for the first time. This will give you a quick and comprehensive introduction to your tent and help you learn how to make sure it lasts for many years to come. The instructions also include a list of components and spare parts, a declaration of conformity, a manufacturer's warranty statement and a statement on the elimination of hidden defects.

Warning!

Warranty can only be invoked with regular maintenance by the manufacturer.

If you have additional questions, please contact us. Questions and suggestions are always welcome.

We wish you an efficient use of your new tent,
yours, A.D. Acovia Design

COPYRIGHTS

We reserve the right to make changes. In A.D. Acovia Design d.o.o. we are constantly improving all types and models of our products. Therefore, please accept with understanding any changes in design, equipment and technique upon delivery. The tents in many photos can also be equipped with accessories available at an additional cost. Claims based on the data, images and descriptions in these operating instructions are therefore not justified. For more detailed information on the entire offer, contact us. Reprint, reproduction or translation, in whole or in part, without the written consent of A.D. Acovia Design d.o.o. not allowed. All rights under the Copyright and Related Rights Act (ZASP) are expressly reserved to A.D. Acovia Design d.o.o. We reserve the right to make changes.

Made in Slovenia.

©2025 A.D. Acovia Design d.o.o.

1 tent use

Traditional scout canvas tent **FREEDOM** is distinguished by a modern design. It has been developed at the request and in accordance with the needs and proposals of scouts, elders of Slovenian scout families, and the *Scout Association of Slovenia*.

The tent is **great for a children's play in the garden**. Raised sides of the tent allow for better utilisation, as they allow sitting next to the sides. Large windows on the doors and sides allow for brightness and good airiness of the interior. The canvas is made of TenCate cotton fabric with excellent properties of ventilation and humidity regulation. It ensures a pleasant climate in the tent and is resistant to all weather conditions. **Setting up the tent is easy and fast.**

2 tent FREEDOM inspection

PICTURE 1 – DIMENSIONS (+ APSE)

width: 240 cm

length: 200 (+80) cm

ridge height: 185 cm

side height: 75 cm

living area: 6.7 m²

PICTURE 2 – FRAMES

ø 22 × 1 mm

galvanised and passivated steel

"POWER GRIP" clamping system

telescopic standing poles: 2 pcs, 183 cm

3-piece ridge pole: 1 pcs, 200 cm

CANVAS

1 pcs, 100% TenCate cotton

BOTTOM

the tent is bottomless

CLOSING SYSTEM

lacing (ribbons and rings)

ACCESSORIES

steel pegs: 34 pcs

synthetic ropes: 18 pcs, 40 cm

synthetic ropes with aluminium tensioners:

15 pcs, 150 cm; 1 pcs, 300 cm


rubber covers: 2 pcs

BAGS (PACKAGING)


canvas + frames + accessories:

1 pcs, ø 40 × 80 cm (0.1 m³)

PICTURE 1 – DIMENSIONS

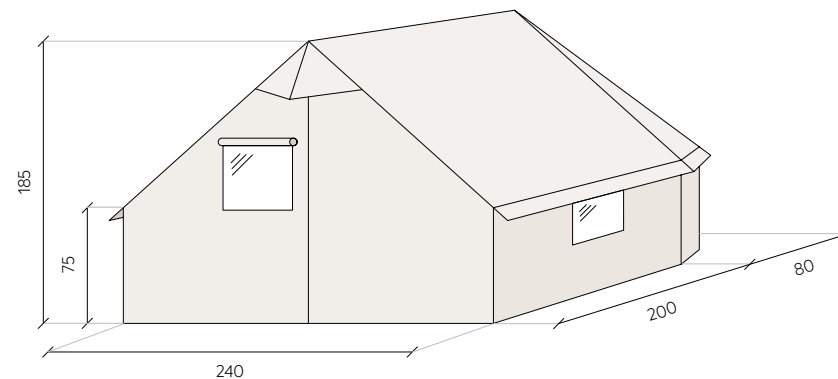


PICTURE 2 – FRAMES

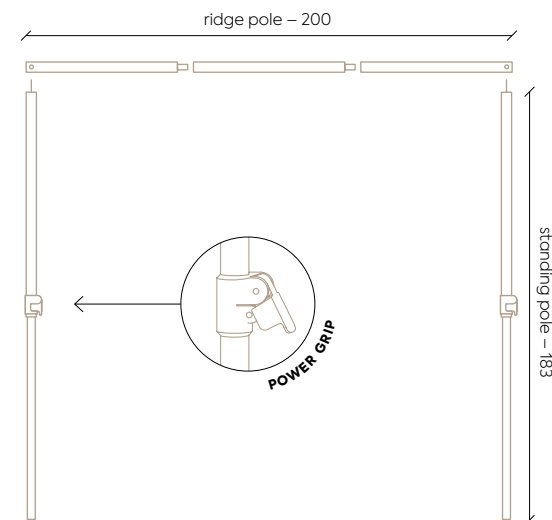

3 setting up the tent

The tent is set up **as a whole**. Choose a suitably large terrain and clean it of stones and other upholstery. **Follow these steps:**

1. Unfold the tent and tie the ropes (150 cm) to the fixing clamps along the edge of the roof ("flaps").
2. Assemble the frame (2 standing telescopic poles and 1 ridge pole).
3. Attach the corners of the tent with pegs.
4. Place the ridge pole onto the tips of the standing poles and insert the rubber covers above the ridge pole.
5. **Be careful!** Adjust every rubber cover on the tip so that the wider part of the cover is looking up.
6. Place the tent canvas on the prepared frame.
7. Stretch the telescopic standing poles to the final height of the tent.
8. Continue the installation on the outside of the tent. While tightening the ropes, you'll achieve the correct tension of the canvas, as well as a nice appearance of the tent.

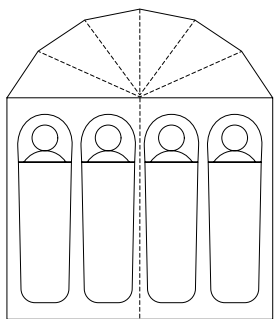

4 dismantling the tent

Disassemble the tent in the reverse order of installation. Remove all the pegs and store them into the accessory bag.

tent packing, storage

Pack exclusively completely dry canvas parts. If this is not possible, dry them as soon as you arrive at the storage place. Remove the components from the packaging, unfold them and let them dry completely.

tent maintenance, cleaning

Brush the canvas parts and, if necessary, wash them with a jet of water. Use only a softer brush. Spread out the tent and let it dry. Washed the frame and let it dry. **Canvas parts, frame parts, and accessories should be packed and stored completely dry. Machine washing, dry-cleaning, or bleaching of canvas parts is not allowed. Ironing or tumble drying them is also not allowed.**

Tears and other damage to the outer canvas should be repaired by the manufacturer.

use of insect repellents

The canvas of the tent is factory impregnated, which prevents water from passing through the canvas. Spraying insect repellent over the surface of the canvas will damage the impregnation, causing possible water seepage in the area where the agent was applied. Subsequent impregnation of the canvas with impregnating agents will not be deep. Consequently, the impregnation is not permanent. It will be necessary to replace the canvas or to sew a new one.

We suggest applying insect repellents to yourself outside the tent to prevent damaging the canvas.

∞ spare parts

CANVAS PARTS

canvas: 100% TenCate cotton

inner isolation roof:

100% cotton (summer)

inner isolation unit:

100% aluminised fabric (winter)

FRAMES

ø 22 × 1 mm

galvanised and passivated steel

"POWER GRIP" clamping system

telescopic standing pole: 183 cm

3-piece ridge pole: 200 cm

BAG (PACKAGING)

canvas + frames + accessories:

ø 40 × 80 cm (0.1 m³)

ACCESSORIES

steel peg

synthetic rope: 40 cm

synthetic ropes with aluminium tensioners:

150 cm, 300 cm

rubber cover

USER MANUAL

english

slovenian

∞ additional equipment

tent underlay

hanging organizer

tent mat

field bed

tent inspection, service

Perform the inspection and service within the prescribed time limits, which are listed below.

PERFORMED BY THE USER

Pre-use inspection – every time you take the tent out of the storage area for re-use.

Regular inspection and service – after each use and before storing the tent. Clean the bottom (mounting surface) and check all packaging. The inspection should take place as described below:

- Assemble the tent according to the installation instructions.
- Inspect the frame parts and their wear. Use a "spare parts and accessories" catalogue for service purposes.
- Inspect the set-up tent from the outside and inside and mark the damage with chalk.
- Inspect the tent karner (PVC protection at the tent floor) and the ropes for anchoring the canvas parts.

PERFORMED BY THE MANUFACTURER/AUTHORIZED SERVICER

General servicing – whenever damage to tent parts occurs they can only be serviced by the manufacturer/authorized servicer, with original spare parts.

tent warranty statement

The FREEDOM tent is guaranteed for 60 months, provided that all instructions for use are followed. The lifetime of the tent is at least 10 years if all instructions for use are followed. The manufacturer undertakes to supply spare parts and other components for at least 5 years and to guarantee the servicing of the tent.

Date: _____

Producer: A.D. Acovia Design d.o.o.





+386 (0)1 721 94 78



acovia-design.com



info@acovia-design.com

A.D. Acovia Design d.o.o.

Šaranovičeva 36b

1230 Vir pri Domžalah

Slovenia – EU

